


*"Hey, my board doesn't have a task light connector!"*

Not to worry, we have you covered! All you need is a Littlite lampset such as the L-12-LED pictured below and a set of Littlite Snap Mount accessory (model SM).

First locate a 1" x 3" area on the mixer and clean it with an alcohol swab. Peel the backing off one piece of the Snap Mount and press it on the board. (ex. 1) Then clean the bottom of the lampset and stick the other piece of Snap Mount to the bottom. Press the light to the board, run the power cord to an outlet and you are ready to rock! (ex. 2) The Littlite can be easily removed for transport and storage.

Example 1

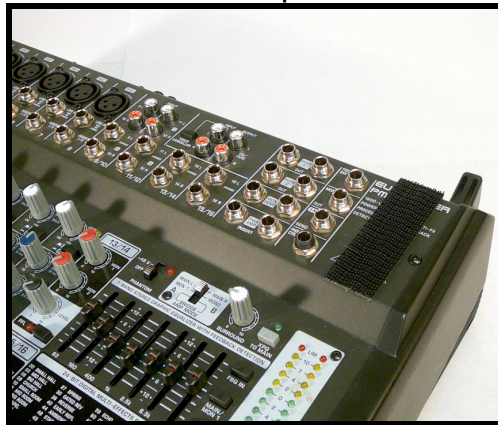

Example 2

